


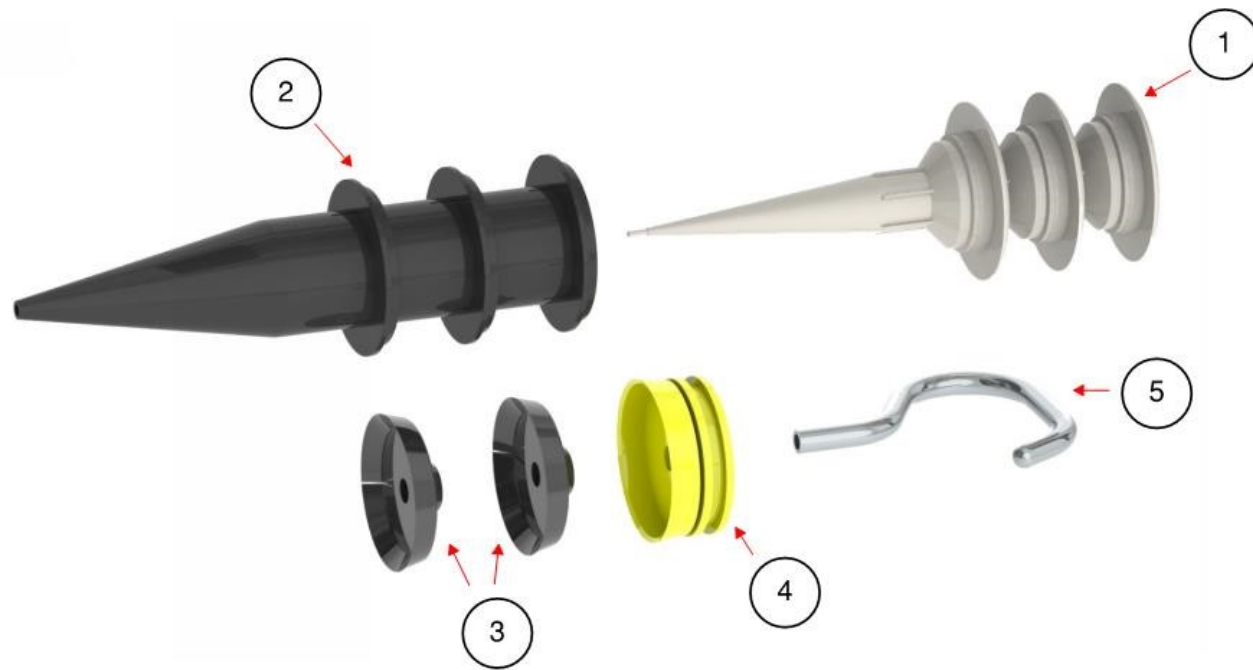


Item #	Item Name	Qty	Application
1	Narrow, plastic nozzles - translucent	3	- Easily sized for the application - cut to size with a utility knife - Generally used for one application and discarded - Fits the Bona Quantum Adhesive Applicator
2	Wide, plastic cone nozzles - black	3	- Durable HDPE plastic is wear resistant. Won't split or crack. - Cut to size with utility knife - Fits Bona Quantum Adhesive Applicator
3	Spare, polyplastic sausage pistons - black	2	2" diameter piton for dispensing sausage packs. - Design flexes under pressure to maintain tight seal in barrel. - Durable polyplastic and has good chemical resistance
4	Hytrel bulk piston - yellow	1	- For those occasional instances when you need your sausage gun to double as a bulk loader - Tough, Hytrel plastic for long life
5	Steel ladder hook pull	1	- Replace the straight or flat pull handle with a convenient, looped-hook pull handle. - Screws onto the piston rod - Performs two jobs - as an easy-to-grip pull and as a handy hook for safe applicator storage

Item #	Part #	Description	Std Qty
1	AT0003032	Front Cap (black cuff)	2
2	AT0003033	Barrel	1
3		Nyloc Nut	1
4		Washer	1
5		Sausage Piston	3
6		Piston Washer	1
7		Jam Nut	1
8	AT0003036	Piston Replacement Kit	
9		Backcap Washer	1
10		Backcap Spacer	1
11	AT0003035	Gripping Plate with Spring	1
12		Handle/Trigger Kit	1
13		Recoil/Spring/Pin Kit	1
14		Pull Nut	1
15		Pull Nut	1
16		Cone	3
17		Nozzle	3
18	AT0003034	Bulk Piston	1
19		Replacement Rod	1
20		Ladder Hook	
21		Bent Cone	


CONVERSIONS*

BONA VERTICAL DISPENSING

BULK DISPENSING

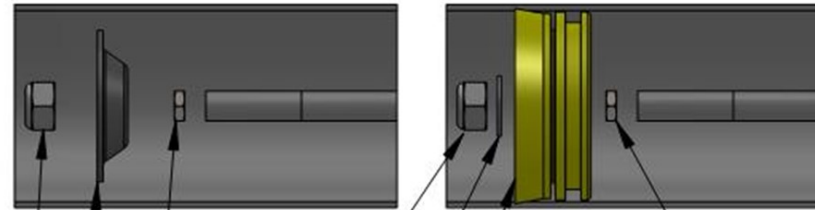


*Details on pages 3-6

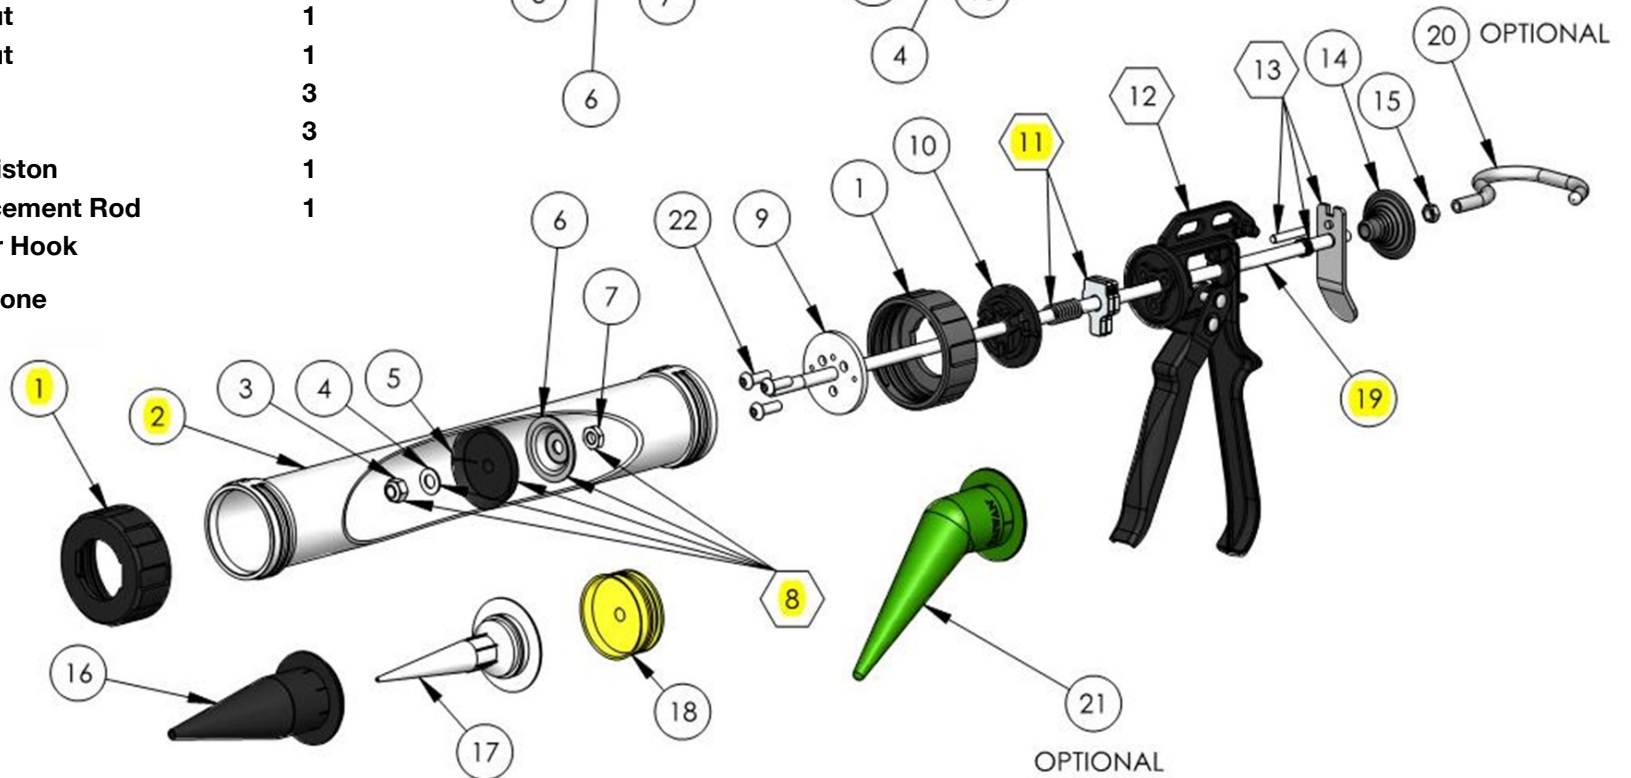

CONVERTING THE BONA QUANTUM 20 OZ SAUSAGE APPLICATOR FOR USE WITH THE 10 OZ BONA VERTICAL CAULK TUBE



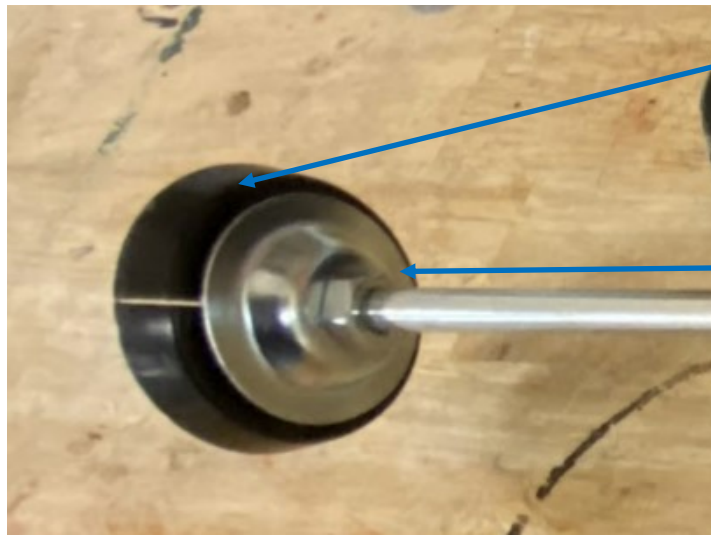

Black sausage piston

13mm jam nut

13mm Nyloc nut and washer
(washer not shown)



Using a 13mm wrench, remove the retaining nut, washer, and black sausage piston from the threaded push rod. (You may need a second 13mm wrench or pliers to hold the jam nut).



Advance the 13mm jam
nut halfway up threaded
rod

Replace washer and Nyloc nut. Tighten.



Replace the barrel, insert Bona Vertical 10 oz. tube.

Thread and tighten front cap (black cuff).

Note: Keep Black sausage piston in a safe location to replace for Quantum sausage application